


Jumpin Janners
07810038489
Method Statement

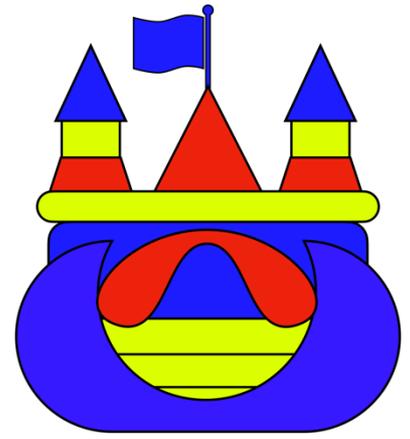

All Inflatables Upon arrival. The driver will take note of any safety information or displays and adhere to the rules of the site / road at all times. The driver will ensure that whilst the vehicle is on a designated carriageway or road surface, the rules of that specific highway are abided by.

Should the vehicle be required to travel on any undesignated areas, such as verges or footways, the vehicle will travel at a maximum of 10 miles per hour with the hazard lights flashing. In these specific areas and / or other highly populated areas, the use of a banks persons is recommended but not compulsory.

The area will then be inspected for suitability, at which time, the area the inflatable will cover will have any large stones or sharp objects removed & disposed of in a sensible & safe manner. The area will then be checked for suitable height & for any obstructions. I.e., cables (above and below ground) trees, lights.

The inflatable will then be laid out & unfolded into place. A ground sheet may be used at this point where necessary. The cables will be laid out, protected, secured and connected to electric / petrol blower /generator as agreed prior to our arrival.

The inflation device will then be checked, connected & switched on ensuring all vents are unobstructed, bent or twisted. The remaining vents on the inflatable will then be secured.

The unit will now be inflated, ensuring that no one is on or near the inflatable.

Weather conditions: Inflatables MUST not be used in excess of the maximum safe wind speed specified by the manufacturer. The industry recommends a maximum wind speed of Force 5 on the Beaufort scale of 30-38kph(19-23mph). Weather forecasts can be obtained from the Meteorological Office.

If the wind speed is too high when we arrive, we will have to cancel your job due to safety reasons.


The various anchor points will then be pegged in place using 12mmx 300mm steel anchor stakes at various points (All anchor points). Clarification will be sought from the hire organiser with regard to the location and depth of any underground services prior to inserting the stakes.

NOTE* All anchor points do not require fixing, the fixing of anchor points is dependent elements such as location, usage, wind speed etc & will be determined on site.


When erecting on hard surface, weights or sandbags may be used and dependant on the circumstances a guide rope may be required. This guide rope may be secured to any fixed object i.e., fence posts & trees.

It is imperative that guests or other persons involved in the event do not encroach on the setup area unless specifically requested to do so.

NOTE* All equipment to be erected as per manufacturers / Health & Safety guidelines & under no circumstances can this be compromised in any way, regardless of aesthetics or the discretion of the venue / organisers.

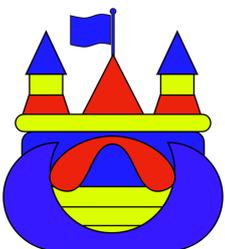

<http://jumpinjanners.com/>

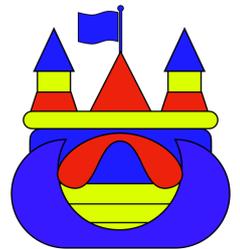

Where necessary barrier fencing, rope or tape will be used to cordon areas off, especially on public events.

When in use of petrol blowers / generators, barrier's & safety fencing may be deemed necessary to seal the area off from access to the public. Any refills to be carried out to the manufacturer's recommendations, turn the throttle into the stop position, fill the tank cautiously using a funnel and do not over fill. Other points that are to be followed are shown below:

No smoking, naked flames, or sparks to be near area.

Not to be operated by any untrained person.

Make sure the fuel cap is secured firmly on the fuel tank.


Any reserve fuel to be stored away from the blower / generator, in a safe secure well-ventilated area and in an approved container. Petrol blower/ generators are for outdoor use only in well-ventilated areas.

Once the inflatable(s) have been checked over by the event manager or delegated health & safety officer, the event may begin. Upon completion of the event, the inflatable's must be evacuated & an allocated member of staff will ensure that no participants are left on the item whilst deflation is in progress.

Once deflation had completed, all anchor pegs, cables, blowers & generators will be removed from site & placed back into the collection vehicles.

The inflatable will then be folded & rolled in an acceptable manor & transported to the vehicle, either by sack truck or wheel cart. When dealing with larger items, the collection vehicle may be required to drive to individual items for collection. Vehicle will travel at a maximum of 10 miles per hour with the hazard lights always flashing. In these specific areas and / or other highly populated areas, the use of a banks persons is recommended but not compulsory & the rules of the site will be always observed.

The area will then be checked for debris & other accessories, which will be dealt with accordingly. The delivery vehicle will then depart the site, in a similar manner to that described above, again taking note of any instructions given or signage in place.

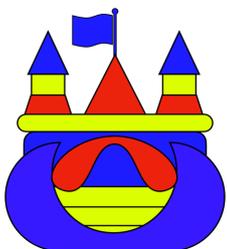

<http://jumpinjanners.com/>

